

Clearview Display

Reference Manual

Document no:
177/5250x

Rev. A



Partner with Performance™

Sevcon Limited (Head Office)

Kingsway South
Gateshead
NE11 0QA
England
T: +44 (0)191 497 9000
F: +44 (0)191 482 4223
E: uk.info@sevcon.com

Sevcon USA, Inc.

155 Northboro Road
Southborough
MA 01772
USA
T: 508 281 5510
F: 508 281 5520
E: us.info@sevcon.com

Sevcon SAS

Parc d'Activité du Vert Galant
95041 CERGY-PONTOISE
CEDEX
France
T: +33 (0)1 34 30 35 00
F: +33 (0)1 34 21 77 02
E: fr.info@sevcon.com

Sevcon Japan KK

Kansai Office
51-26, Ohyabu, Hikone
Shiga, Japan 522-0053
T: +81 7 4946 5766
E: jp.info@sevcon.com

Sevcon Asia Limited

Room 504 Wellbeing Plaza
75-1 Wondang-dong
Seo-gulncheon City 404-320
Korea
T: +82 32 215 5070
F: +82 32 215 8027
E: kr.info@sevcon.com

www.sevcon.com

Table of Contents

Chapter 1: Introduction	1-1
<hr/>	
About Clearview Display documentation.....	1-2
This version of the manual.....	1-2
Copyright	1-2
Scope of this manual	1-2
Related documents	1-2
Drawings and units	1-2
Warnings, cautions and notes.....	1-3
Product identification label.....	1-4
Technical support.....	1-4
Product warranty	1-4
Chapter 2: About the Display	2-1
<hr/>	
Introduction.....	2-2
Standard features and capabilities	2-3
Mechanical package.....	2-3
Available accessories	2-3
Safety and protective functions	2-4
General.....	2-4
Chapter 3: Connection	3-1
<hr/>	
Connecting the Display.....	3-2
Connector.....	3-2
CAN bus termination	3-2
Signal connections	3-2
Chapter 4: Specification	4-1
<hr/>	
Electrical	4-2

Input voltage	4-2
Output protection	4-2
CAN interface	4-2
Control inputs	4-2
Isolation	4-2
EMC.....	4-2
Regulatory compliance	4-3
Mechanical.....	4-4
Operating environment	4-4
Weight.....	4-4
Dimensions	4-4

Chapter 5: Display Usage 5-1

Principle of operation.....	5-2
Functional description.....	5-2
Button Interface	5-2
Power On	5-2
Splash Screen.....	5-3
Acquisition of Displayed Data.....	5-3
Menu and screen changing.....	5-4
Main Screen	5-5
System Overview	5-5
Vehicle Status	5-7
Time to Distance	5-8
Personalities and Configuration.....	5-9
Test	5-11
Fault History	5-12
Debug.....	5-13
Software Update.....	5-14

Chapter 6: Configuring the Display 6-1

Display CAN bus Node ID.	6-2
Node ID when Connected to a System	6-2
Node ID when Standalone	6-2

Configuring the Available Screens	6-3
Screen List	6-3
First Screen	6-4
Configuring the Main Screen.....	6-5
The Screen	6-5
Screen Item Object Dictionary Locations	6-6
The Arc Graph	6-10
The Bar Graph	6-14
Data Object Text item.....	6-16
Bitmap item.....	6-18
Time and Date item.....	6-21
Chapter 7: Local Display Settings	7-1
<hr/>	
Display Parameters	7-2
Clock Settings	7-2
Metric or Imperial Units	7-3
Distance Units.....	7-3
Time to Distance Parameters	7-3
Fault log	7-4
Chapter 8: Local CANbus Settings	8-1
<hr/>	
CANbus Parameters.....	8-2
Manual / Auto Baud rate.....	8-2
System Information.....	8-2
Chapter 9: Example Screen Layout	9-1
<hr/>	
Example Layout.....	9-2
The layout – bitmaps.....	9-3
The layout – Arc Graph and Bar Graph.....	9-4
The layout – Text items	9-5
The layout – Date and Time.....	9-6



Chapter 1: Introduction

About Clearview Display documentation

This version of the manual

This version of the Clearview Display manual replaces all previous versions. Sevcon has made every effort to ensure this document is complete and accurate at the time of printing. In accordance with our policy of continuing product improvement, all data in this document is subject to change or correction without prior notice.

Copyright

This manual is copyrighted 2011 by Tech/Ops Sevcon. All rights are reserved. This manual may not be copied in whole or in part, nor transferred to any other media or language, without the express written permission of Tech/Ops Sevcon.

Scope of this manual

This manual provides information on how to use the Clearview Display, and on which Sevcon products the display is compatible with. Details of controller parameters which can be adjusted with the display are not included in this manual.

Related documents

The following documents are available from Sevcon:

- Gen4 Applications Reference Manual.
- The Object Dictionary providing important information about CANopen communication with the display.
- Device Configuration Files (DCF) and Electronic Data Sheets (EDS) for the display.

Drawings and units

Orthographic illustrations in this manual are drawn in Third Angle Projection. SI units are used throughout this manual.

Warnings, cautions and notes

Special attention must be paid to the information presented in Warnings, Cautions and Notes when they appear in this manual. Examples of the style and purpose of each are shown below:



A WARNING is an instruction that draws attention to the risk of injury or death and tells you how to avoid the problem.



A CAUTION is an instruction that draws attention to the risk of damage to the product, process or surroundings.



A NOTE indicates important information that helps you make better use of your Sevcon product.

Product identification label

If you have a customized product your unique identifier will appear at the end of the Type number. When discussing technical issues with Sevcon always have your product's Type number, Part number and Serial number available

Error! Reference source not found. shows a typical product identification label.

Technical support

For technical queries and application engineering support on this or any other Sevcon product please contact your nearest Sevcon sales office listed on the inside front cover of this manual. Alternatively you can submit enquiries and find the details of the nearest support centre through the Sevcon website, www.sevcon.com.

Product warranty

Please refer to the terms and conditions of sale or contract under which the Display was purchased for full details of the applicable warranty.



Chapter 2: About the Display

Introduction

The Display is a configurable CANopen display which can be set up to show a variety of data from the Sevcon motor controllers it is connected to. It can also be used to configure parameters on the controllers. It has the following features:

- 320x240, 256 colour display.
- Auto-baud rate detection.
- Configurable main screen.
- Configurable screen list.
- Single and multi-node support.
- Reads/writes a wide range of commonly used vehicle system settings.
- Displays I/O + motor/vehicle status information
- Displays any active faults and provides basic diagnostic information.
- Displays a historical fault log for any fault on the motor controller system.
- Fully flash programmable for display software updates.

Standard features and capabilities

Mechanical package



Figure 1 Mechanical package

Available accessories

The following accessories are available from Sevcon:

- External harness to connect to system
- Drive Wizard – PC based configuration tool

Safety and protective functions

General



Do not adjust the value of any parameter unless you fully understand the effect of this change. You should have read and understood the User Manual for all the connected devices before connecting the display to them.



Do not attempt to open the display as there are no serviceable components. Opening the display will invalidate the warranty.



Electric vehicles are subject to national and international standards of construction and operation which must be observed.



Chapter 3: Connection

Connecting the Display

Connector

The display is supplied as standard with an 8 way Molex connector.

CAN bus termination

The display is designed to be permanently connected to a single or multi node CAN bus. To assist with wiring on the vehicle the display includes a CAN termination resistor which can be used as required to achieve the correct bus termination.



If the display fails to detect a standalone device then you should check that the CAN bus has correct termination

Signal connections

Pin	Name	Type	What to connect	Maximum rating
1	+24V power	Power	Not connected	35V
2	Gnd	Power	+24Volt supply return	-35V
3	CAN High	Comms	CAN High	35V
4	CAN Low	Comms	CAN Low	35V
5	CAN High	Comms	CAN High	35V
6	CAN Low	Comms	CAN Low	35V
7	CAN Term	Comms	Link to pin 6 to enable 120Ω termination	
8	N/C		Not connected	

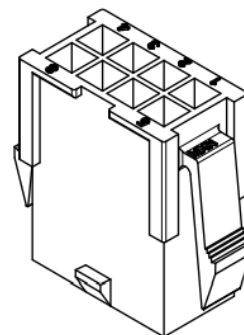


Table 1 Connector pin out and wiring information

Pins are protected against short-circuits to the battery positive or negative voltages.

CAN High and CAN Low connections are duplicated to enable daisy chaining of CAN nodes.



Chapter 4: Specification

Electrical

Input voltage

Working voltage limits:	15V to 28.8V
Input protection:	Input protected against reverse connection of supply Maximum current draw 100mA

Output protection

Short-circuit:	Protected against short circuit to supply
----------------	---

CAN interface

CAN protocol:	CANopen profiles DS301 Physical layer uses ISO11898-2.
Baud rates supported:	1Mbits/s, 500 kbits/s, 250 kbits/s, 125 kbits/s, 100 kbits/s, 50 kbits/s

Control inputs

User interface	3 button keypad input
----------------	-----------------------

Isolation

Any terminal to the case:	TBD (Gen4:Withstands 2 kV d.c. Meets EN1175-1:1998 and ISO3691 Complies with IEC-60664
---------------------------	--

EMC

Radiated emissions:	EN12895 (Industrial Trucks – Electromagnetic Compatibility) EN 55022:1998, 6, class B EN 12895:2000, 4.1 Emissions. When part of a system with a motor operating, FCC Part 15, Radiated Emissions. Meets the standards given in FCC Part 15, Section 15.109:
Conducted emissions:	No mains port, therefore not required
Radiated RF field:	EN 61000-4-3, 5.1 Test Level: user-defined test level of 12 V/m EN 12895:2000, 4.2 Immunity EN 61000-4-6, Table 1 – Test Levels
Electrical fast transient:	EN 61000-4-4, Table 1 – Test Levels, Level 2

Electrostatic discharge:	EN 12895:2000, 4.2 Electrostatic Discharge 4 kV contact discharge 8 kV air discharge
Electrical surge:	EN 61000-4-5:1995, Table A.1 – Selection of Test Levels, Class 3

Regulatory compliance

Designed to meet:	EN1175-1:1998 (which covers EN1726 for the controller) ISO 3691 UL583 ASME/ANSI B56.1:1993
-------------------	---

Mechanical

Operating environment

Operating temperature:	-10°C to +50°C
Non-operation temperature:	-40°C to +85°C (can be stored for up to 12 months in this ambient range)
Humidity:	95% (non-condensing) at 40°C and 3% at 40°C
Ingress of dust and water:	IP42

Weight

Weight	0.3 kg
--------	--------

Dimensions

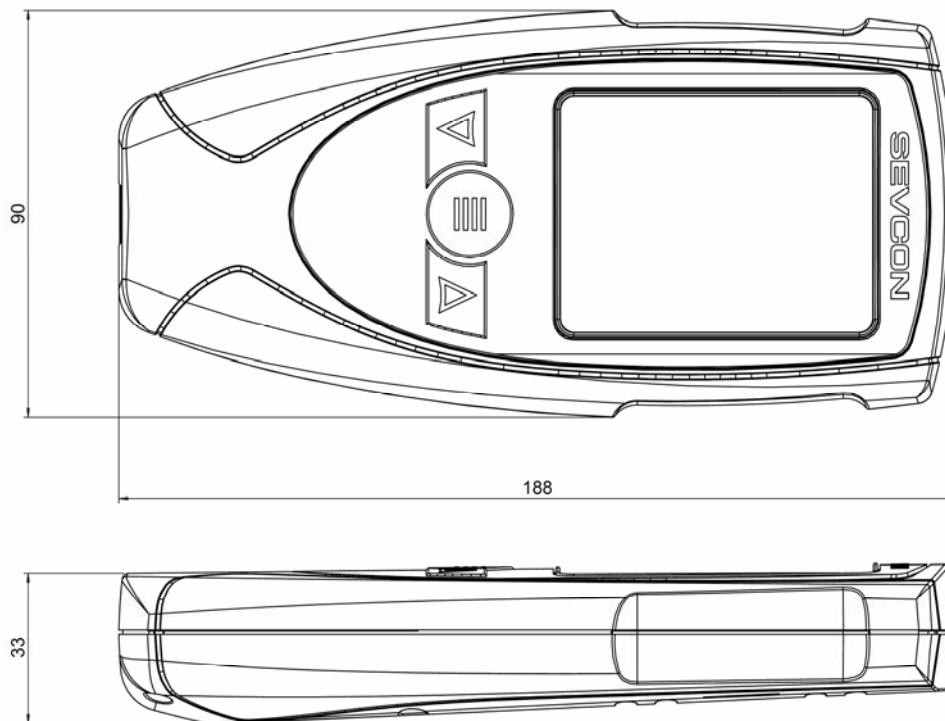


Figure 2 Dimensions



Chapter 5: Display Usage

Principle of operation

Functional description

The Clearview Display can be used to display a variety of information about the current state of the Sevcon motor controllers to which it is connected. The information to be shown can be configured, and the screens which can be selected during normal operation can be configured.

Calibration functionality is provided through several screens.

This section will give a brief overview of each screen which can be enabled in the display.

Button Interface

All features on the display are controlled using the three buttons. The function of the buttons is designed to be intuitive to use, and varies slightly depending on the operating mode.

Power On

The Display is designed to be easily connected to a controller network, and to operate with minimum setup or knowledge of the PDO configuration on the controllers. To achieve this, when the system is powered on, the display performs several detection steps:

1. The display listens to the CAN bus until it successfully receives a message from a node. This listen in process is performed for each baud rate in turn, enabling the display to auto detect the controller baud rate.
2. The display determines which nodes are connected to the CAN bus. This is achieved by reading product codes. For each Sevcon node discovered, the PDO mappings are interrogated, enabling the display to “find” the I/O setup, and to determine which motors are connected.
3. The baud rate and system configuration are stored in memory, to be re-used on subsequent power cycles. This enables the display to start up more quickly on subsequent power cycles.



The first time the display is powered on, there is a chance that the baud rate selection will start at an incorrect rate. This can cause controllers to go into a CAN bus OFF state. Once the display has powered up, it will save the baud rate that has been detected. On future

power cycles the display will start at the detected baud rate, and the system will start up normally.

During the power on process, the splash screen is displayed. Power on progress is displayed on the bottom of this screen.

Splash Screen

The default splash image is shown below.

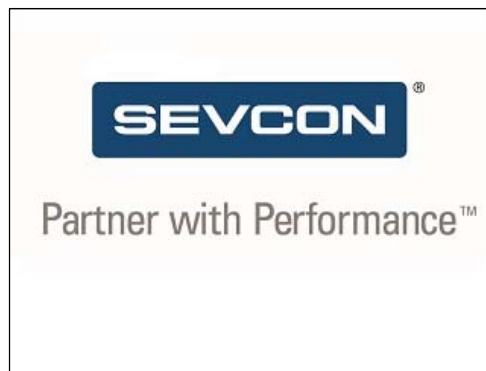


Figure 3 Splash Screen



This product is produced as a generic product. If you require a custom splash image for your application, contact your local Sevcon representative to discuss.

Acquisition of Displayed Data

The display can acquire the data that it displays either using the CANopen SDO protocol, or using the CANopen PDO protocol. By default, the display will generate SDO upload requests for any data item displayed but if an RPDO has been configured on the display to handle that data item, then no SDO request will be generated, and the display will only show the data that has been received in PDO messages.

Please contact Sevcon for assistance with configuring RPDOs on the display.

Menu and screen changing



Figure 4 – The menu

When the display has completed its power on initialisation, the first screen is shown. The first screen will be one of the screens shown below, and is configurable. To change between screens, the display has a simple menu.

To show the menu, press and hold the enter button for at least 1 second. The menu will then be shown. Use the up and down buttons to select the screen that you would like to see, and press enter. The screen will then change to the selected screen.

Only screens which have been enabled will show in the menu. Instructions on how to configure the available screen list are provided in section "Configuring the display"

Main Screen

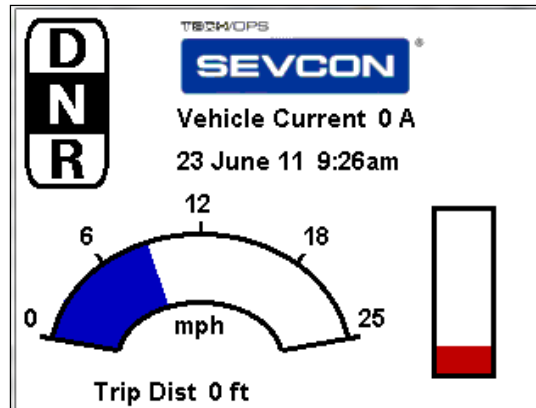


Figure 5 – Customizable main screen

An example of a main screen layout is shown in Figure 5. This screen can be configured to suit the vehicle or application with which the display is being used. The main screen is always visible in the display menu.

Instructions on how to configure the main screen are included in section “Configuring the Display”

Resetting Trip Distance

As shown above, the vehicle trip distance can be displayed as a main screen item. When the item is on screen, a trip reset feature is enabled. To reset the trip distance, press the up button, which will cause the trip distance to flash. While it is flashing, press the up button again. This will reset the trip on the master controller.

System Overview

The system overview screen is shown in Figure 6.






	I/O master, Master	No fault on Node
	Integra slave, R Trac	No fault on Node
	Gen4 EV slave, Pump	No fault on Node
	Boost slave, P Steer	No fault on Node
	Sevcon Display	No fault on Node
Node ID: 1		No Fault Active

Figure 6 – System Overview

This screen displays information about the currently connected nodes, and the state of the nodes. The primary function is to show any active faults that are present.

The screen is split into two halves:

- Top half shows the list of nodes that are currently connected, and if any faults are active on the node.
- Bottom half shows detailed fault information for the node that is selected with the highlight bar.

The up and down buttons move the highlight bar between nodes on the top half of the screen.

Where there are multiple faults active for a node, the number of faults is given as a count in the bottom half of the screen. Each of these faults can then be viewed by pressing the enter button to cycle round the faults.

The screen is updated in real time. If a fault is set or cleared on the system, the information on the screen will be updated automatically.

Vehicle Status

The vehicle status screen is shown in Figure 7.

VEHICLE STATUS MONITOR				
Battery	0.0 V		0 A	
Traction Drive State	OFF			
	AC Left	AC Right	AC Pump	AC Steer
Cap. Volts	0.0 V	0.0 V	0.0 V	0.0 V
Cont. Temp.	32 °F	32 °F	32 °F	32 °F
Mtr. Volts	0.0 V	0.0 V	0.0 V	0.0 V
Mtr. Amps	0 A	0 A	0 A	0 A
Mtr. RPM	0 RPM	0 RPM	0 RPM	0 RPM
Mtr. Temp.	32 °F	32 °F	32 °F	32 °F
Mtr. Torque	0.0 Nm	0.0 Nm	0.0 Nm	0.0 Nm

Figure 7 – Vehicle Status Screen

This screen shows status information related to each of the motors on the vehicle, as well as the overall battery voltage and traction drive mode. The screen shown has 4 motors on the vehicle. Where fewer motors are fitted, only data for the connected motors will be shown.



Not all Sevcon controllers can measure battery voltage. If the master controller on the vehicle cannot measure battery voltage then the value displayed will be a constant value read out of that unit, probably nominal voltage. An external system can write battery voltage into the master controller, and this value will then be seen on the display.

Time to Distance

The time to distance screen is shown in Figure 8.

Time to Distance		
Distance 1	10 m	0.00 s
Distance 2	20 m	0.00 s
Distance 3	30 m	0.00 s
Distance 4	50 m	0.00 s
Distance 5	100 m	0.00 s

Figure 8 – Time to Distance Screen

This screen is intended to be used as a performance evaluation screen for the vehicle. It will display the time it takes to move from stationary to each of the distance markers. To use the screen:

- Real vehicle speed and traction drive state must be transmitted via a PDO from the vehicle master controller to the display. This is required to ensure that the update rate of the speed is sufficient to obtain an accurate timing.
- Stop the vehicle.
- Accelerate in either direction. The times will be cleared.
- As each distance marker is passed, the time will be shown on the screen.
- Vehicle can be stopped at any time. Times will remain on the screen until the vehicle moves again.

The distance markers can be adjusted to suit the vehicle or application using Display – Time to Distance in the Configuration screen.



If no times are seen when driving the vehicle, then check that both vehicle speed and traction drive state are unmapped in display RPDOs correctly. Also ensure that the vehicle speed has been correctly setup with numerator and denominator scale factors.

Personalities and Configuration

The personalities and configuration screens allow local display parameters, motor parameters, and drivability parameters to be adjusted.

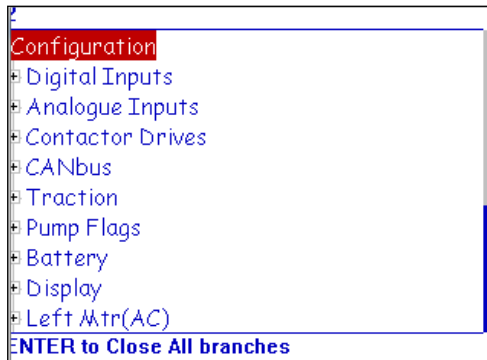


Figure 9 – Configuration Screen

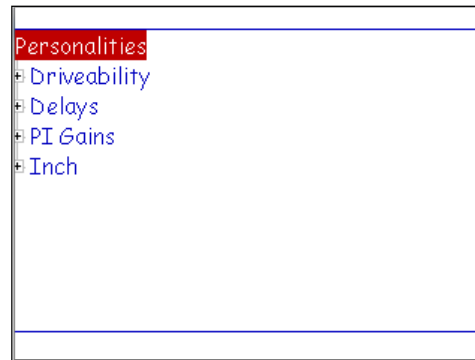


Figure 10 – Personalities Screen

Items that are visible on these screens are dependent on the following:

- Items will only be shown if there is an associated motor controller, motor, or drivability profile enabled. Items that are not present on a setup will be removed from the tree view.
- Items will only be shown if the access level of the display has been set at a level that exceeds the required login level for that parameter. The required levels are detailed in the controller object dictionary. If the display is at a lower level then items are hidden.

These screens are simple tree view layouts. To navigate, use the up and down buttons to change the highlighted item. Tree nodes can be expanded (when the + symbol is present) or collapsed (when the – symbol is present) by pressing the enter button. When the lowest level nodes are visible, values are displayed for the parameters. The screen in Figure 11 shows a tree node opened into edit mode.

.1.1.1
Personalities
- Driveability
 - Baseline
 - Max Drive Torque 0.000
 - Dir Brake Torque 0.000
 - Neut Brake Torque 0.000
 - Foot Brake Torque 0.000
 - Max Speed FWD 0 RPM
 - Max Speed REV 0 RPM
 - Drive Accel Rate 10 RPM/s
 - Dir Accel Rate 10 RPM/s
 - Neut Accel Rate 10 RPM/s
JP/DOWN. ENTER to submit

Figure 11 – Tree item in edit mode

For a highlighted item, pressing the enter key will enter or exit edit mode. When in edit mode the value is highlighted, and can be altered using the up and down buttons. To send the new value to the controller, press the enter button, which will exit edit mode and send the value to the correct controller.

Test

The test screen is shown in **Error! Reference source not found.** This screen is a tree format, similar to the configuration and personality screens, but the contents are read only.

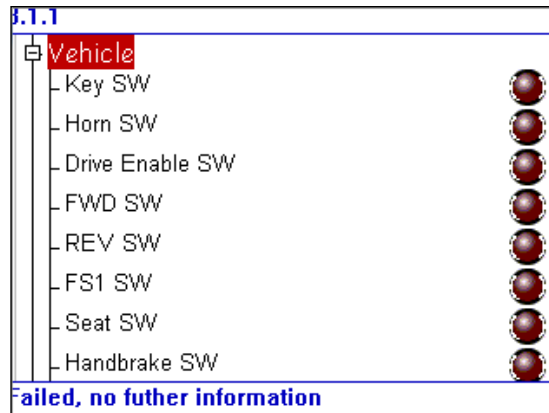


Figure 12 Test Screen


During the power on process, the configuration of the I/O on the vehicle is determined. This means that only switch inputs configured in the PDO mappings of the vehicle will be displayed. The LED indicator shows whether the switch is active or inactive. This screen is intended to be used as a debug / diagnostic tool to help find a problem with the vehicle wiring. The state of each switch item is the raw unprocessed value read by the controller.

Analogue values are also shown, along with status data on the motors that are connected.

Navigation is the same as for other trees. Use the up and down buttons to change the highlighted item. Tree nodes can be expanded or collapsed by pressing the enter button.

Fault History

The fault history screen is shown in Figure 13.

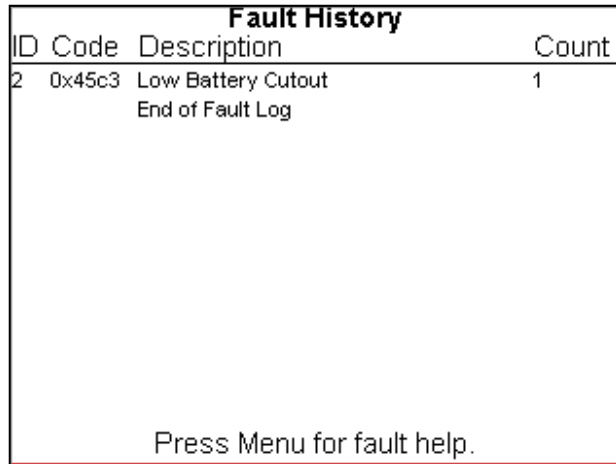

Fault History			
ID	Code	Description	Count
2	0x45c3	Low Battery Cutout	1
End of Fault Log			

Press Menu for fault help.

Figure 13 Fault History Screen

The fault history screen shows a chronological list of faults that have occurred on the vehicle. These are displayed with the most recent fault at the top of the list.

The information shown is:

- ID – the Node ID which sent out the fault message.
- Code – the fault code.
- Description – A short description of the fault.
- Count – the number of times the fault has occurred since the fault history was last cleared.

When on the fault history screen, a short press on the enter button will cause the fault history help screen to be shown. This screen is shown in Figure 14.

This screen will show the detailed fault help text for each fault in the log. To navigate, press the up / down buttons to scroll through the fault history, and fault help will be displayed for each fault in turn.

To exit the fault history help, either press the enter button to return to the fault history screen, or long press the enter button to show the menu, and navigate away from the fault screen.

The fault history help screen is not accessible if the fault history is empty.



The fault history can be cleared in the configuration screen.

Fault History			
ID	Code	Description	Count
2	0	<p>Fault History Help</p> <p>1/1 : R Trac (Node 2) 11:53am 23/6/11 [0x00 0x00 0x00]</p> <p>Low Battery Cutout Fault Code: 0x45c3 Battery voltage is less than under voltage limit for longer than the protection delay. Charge battery.</p>	

Press Menu for fault help.

Figure 14 Fault History Help

Debug

The debug screen is not accessed through the menu. It is always present regardless of configuration, and enables a simple way to change the access level of the display. To access the debug menu:

- Bring up the menu with a long enter button press.
- Press and hold the down button, AND while holding the down button, press the up button.
- Release the buttons.

This screen is intended to enable trained service personnel to increase the access level of the unit in order to carry out parameter modification, or advanced debug using the display.

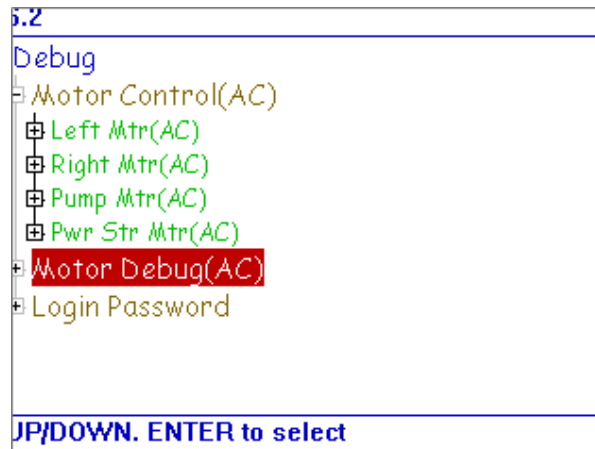


Figure 15 Debug Screen

Software Update

It is possible to update the firmware of the display, using Sevcon's DriveWizard or DVT configuration tool.

Please contact Sevcon for assistance with this process.



Chapter 6: Configuring the Display

Display CAN bus Node ID.

Node ID when Connected to a System

The display is designed to be connected to a variety of different vehicle combinations, and does not have a fixed node id.

The node id is set to be 10 greater than the highest node id that was discovered.

For example, if connected to a 3 node system that has 3 motor controllers as nodes 1, 2 and 3, the display will have node id 13.

Node ID when Standalone

If the display is powered up standalone, the node id will default to 35.

Configuring the Available Screens

Screen List

The display has a set of screens, as detailed in the previous section. Most of these screens can be enabled or disabled for a particular vehicle or application.

The individual screens are enabled through a display object dictionary item as shown below:

Object Index 0x2805	Description	Value
Sub 0	Number of sub indexes	11
Sub 1	System overview	1 = enable, 0 = disable
Sub 2	Vehicle status	1 = enable, 0 = disable
Sub 3	Personalities	1 = enable, 0 = disable
Sub 4	Configuration	1 = enable, 0 = disable
Sub 5	Test	1 = enable, 0 = disable
Sub 6	Fault History	1 = enable, 0 = disable
Sub 7	Unused	
Sub 8	Unused	
Sub 9	Unused	
Sub 10	Backdoor*	1 = enable, 0 = disable
Sub 11	Time to Distance	1 = enable, 0 = disable

*The Backdoor screen is an advanced debug screen intended for Sevcon use only. This should not normally be enabled.

The new selections will take effect on the next power cycle.

First Screen

The first screen after power on can be selected. Once the Splash screen / power on process is complete, the display will go to the chosen screen as the first screen to show. This is configured using an object dictionary item as shown below:

Object Index 0x2807	Description	Value
Sub 0	First screen	0 = Main 1 = System Overview 2 = Vehicle Status 3 = Time to Distance 4 = Personalities 5 = Configuration 6 = Test 7 = Fault History

The first screen can also be selected through the Configuration screen, by using the Display Initial Screen parameter. The values to select are as above.


The setting will take effect after the next power cycle.

Configuring the Main Screen.

The Screen

The screen on the display is 320 x 240 pixels.

The co-ordinate system used to specify the location of an item on the screen is shown in the diagram below. The coordinates are (x,y) where 'x' is the horizontal offset from the left, and 'y' is the vertical offset from the top.

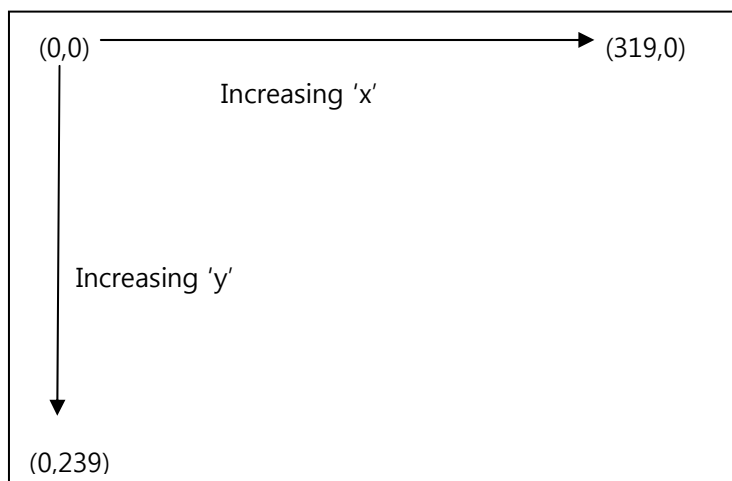

Screen Item Object Dictionary Locations

There are 10 OD entries which are for configuration of the items that can be displayed on the screen. These are at location 0x2900 to 0x2909. Each object fully defines one screen item.




Each item has a set of sub-index items which are used to control the appearance of the item. The exact functionality varies depending on the type of item selected. The template object is shown below:

Object Index 0x2900 to 0x2909	Description	Value
Sub 0	Number of sub index's	11
Sub 1	Item type	
Sub 2	X position	
Sub 3	Y position	
Sub 4	Associated Data Object	
Sub 5	Style Flags	
Sub 6	Data 1 – Item specific	
Sub 7	Data 2 – Item specific	
Sub 8	Data 3 – Item specific	
Sub 9	Data 4 – Item specific	
Sub 10	Data 5 – Item specific	
Sub 11	Data 6 – Item specific	

Configuring the Display

Sub 1 – Item Type

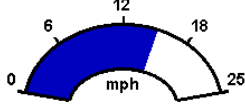The item type is selected according to the table below:

Data	Description	Example Image
0	No Item This entry is not used	
1	Ellipse graph. (Arc shaped analogue graph)	
2	Bar graph. (Rectangular analogue graph)	
3	Text Object (contents of a Data Object)	Vehicle Current 0 A
4	Bitmap (bitmap selected from pre-compiled list)	
5	Date and time	23 June 11 3:10pm

Sub 2&3 – (x,y) position

These items set the position of the top left of the item.

Each item is drawn on screen by setting a draw rectangle. This rectangle is a bounding rectangle sized to fully enclose the item that is being drawn. The co-ordinates specify the position of the top left of this bounding rectangle.

Sub 4 – Associated Data Object

Each item can have a data object associated with it. The data object defines the source of the data, the scaling of the data, and the units. Where applicable they will be shown on screen. The data objects that are available are as follows:

Sub 4 Value	Description	Master OD index	Units	Scaling	Local OD index (for PDO use)
0	No Data	N/A	N/A	N/A	N/A
1	Vehicle Speed (1 DP)	0x2721,0	Selectable	x16	0x2721, 0
2	Vehicle Speed (0 DP)	0x2721,0	Selectable	x16	0x2721, 0
3	Forward Switch	0x2121,0	N/A	N/A	0x2121, 0
4	Reverse Switch	0x2122,0	N/A	N/A	0x2122, 0

5	Park Brake	0x2125,0	N/A	N/A	0x2125, 0
6	BDI Charge	0x2790,1	"%"	x1	0x2790, 1
7	Left Motor RPM	0x606C,0	"RPM"	x1	SDO only
8	Right Motor RPM	0x606C,0	"RPM"	x1	SDO only
9	Steer Angle	0x2624,0	"°"	X364	0x2623, 0
10	Battery Voltage	0x5100,1	"V"	x16	SDO only
11	Battery Current	0x5100,2	"A"	x16	SDO only
12	Throttle	0x2620,0	"%"	x3276.7	0x2620, 0
13	Left DC Motor Current	0x7878,0	"A"	x1	SDO only
14	Right DC Motor Current	0x7878,0	"A"	x1	SDO only
15	Left Motor Torque	0x4602,12	"Nm"	x64	SDO only
16	Right Motor Torque	0x4602,12	"Nm"	x64	SDO only
17	Driveability Selected	0x2720,1	N/A	x1	SDO only
18	Pump Throttle	0x2640,0	"%"		0x2640,0
19	Pump RPM	0x606C,0	"RPM"	x1	SDO only
20	Left AC Motor Current	0x4600,12	"A"	x1	0x2642,0
21	Right AC Motor Current	0x4600,12	"A"	x1	0x2643,0
22	Highest priority fault	N/A	N/A	N/A	N/A
23	Odometer (base value)	0x29A0,1	km	x256	SDO only
24	Odometer (0.1km)	0x29A0,2	km	x10	SDO only
25	Odometer (0.1miles)	0x29A0,3	miles	x10	SDO only
26	Trip (base value)	0x29A1,1	km	x256	SDO only
27	Trip (0.1km)	0x29A1,2	km	x10	SDO only
28	Trip (0.1miles)	0x29A1,3	miles	x10	SDO only
29	Vehicle Key Hours	0x2781,1	"hr"	x1	SDO only
30	Vehicle Traction Hours	0x2782, 2	"hr"	x1	SDO only
31	Left Motor Temp	0x4600,3	"C"	x1	SDO only
32	Right Motor Temp	0x4600,3	"C"	x1	SDO only
33	Left AC Motor Current	0x7078,0	"A"	x1	0x2642,0

Configuring the Display

34	Right AC Motor Current	0x7078,0	"A"	X1	0x2643,0
35	Vehicle Drive Mode	N/A – composite*	N/A	X1	0x2720,6
36	Vehicle Current	N/A – composite*	N/A	X2	0x264F

*A composite item includes functionality to decode one or more sources of information into a single item that can be displayed on screen. Vehicle drive mode is composed of forwards and reverse switch data, and vehicle current is a summed total for battery current on all nodes combined.

The Arc Graph


The arc graph is a curved analogue graph. This is intended to show a variety of data including speed and motor RPM.

The graph is constructed from the data parameters which can fully control the shape and appearance on screen. First, a brief explanation of angles and ellipses is required.

The graph is intended to have tick marks around the outer edge, with values suitable to the selected data object.

Ellipse shapes and the bounding rectangle.


An ellipse drawn on screen is defined through the size of the bounding rectangle, e.g.:

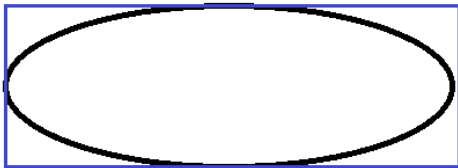

The black ellipse is contained within the blue bounding rectangle. This means that we can define the shape of the graph on screen by changing the size of this rectangle. Using the example above, our x size and y size (in pixels) could be 400 (x width) and 200 (y height).

This (x,y) size will define the outer arc shape.


The inner arc shape is then defined with a graph thickness. This is the number of pixels between the inner and outer ellipses, e.g.:

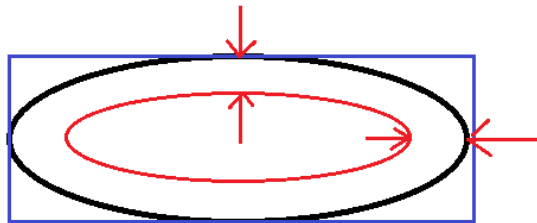


The graph thickness (space between inner and outer arcs) is applied equally to the x and y sizes to produce 2 arcs, one centred within the other.

This leaves a doughnut shaped item. To create the graph, we need to specify the start and end angle of the arc. The reference angles are as shown below:


Configuring the Display

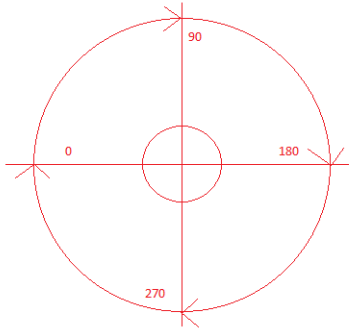

To finally create the arc graph shape we define the start angle and end angle. The display will then create a bounding rectangle around the remaining arc, ready to be drawn onto the screen, e.g.:

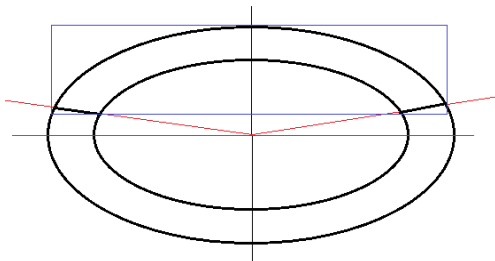

 In this picture the blue rectangle contains the arc that will be seen on screen. The start and end angles in this case were (approximately) start at 15, and end at 165. This would leave an on-screen arc looking something like:



The x,y screen position of this item would be the top left of this blue rectangle.

Sub index items

The arc graph uses the following specific sub-items:

Sub index	Description	type
Sub 5	Graph flags. Control specific appearance settings.	U16
Sub 6	Data 1. Outer ellipse x size	U16
Sub 7	Data 2. Outer ellipse y size	U16
Sub 8	Data 3. Start angle in degrees.	16
Sub 9	Data 4. End angle in degrees.	16


Sub 10	Data 5. Graph thickness.	16
Sub 11	Data 6. Maximum value displayed	U32

Sub 5 – Style flags

The style flags are contained within an U16 item. The flags help to define the operation of the item. The following attributes can be configured:

- Direction of the graph fill.
- Whether the graph will display negative numbers, or absolute values.
- How the value of the data object is shown on the graph. Standard filled bar graph, or position marker.

Represented as binary, msb at the left, the object is constructed as shown below. 'u' indicates that the bit is unused.

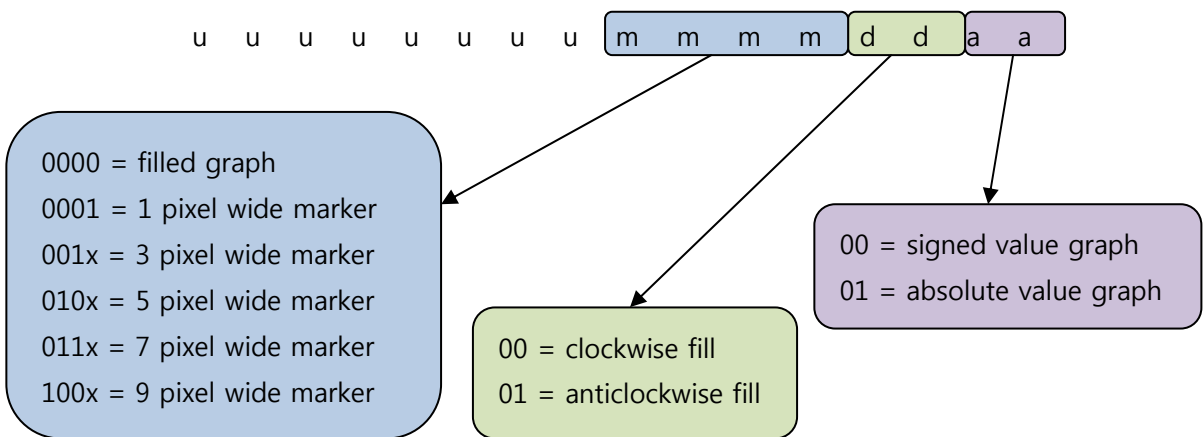

Sub 6 & 7 – (x,y) Size

These items define the x and y size of the outer ellipse shape used to create the arc.

Sub 8 & 9 – Start and End Angles

These items define the start and end points of the graph, in degrees. These will define the arc shape that will be shown on screen, and the range over which the graph will be filled.

Sub 10 – Graph thickness

This defines the thickness of the graph, i.e. the space between the outer and inner ellipse shapes. This is in pixels.

Sub 11 – Maximum range

This defines the maximum range of the graph. The operation of this depends on the signed / absolute setting:

- If graph setting absolute:
 - If maximum range is less than the maximum for the referenced data object, then the maximum on screen range will be according to this item.
 - If maximum range is greater than the maximum for the referenced data object, then the maximum on screen range will be according to the referenced data object.
- If graph setting signed:
 - The maximum (min or max) value from the referenced DO is calculated.
 - Maximum range is then applied as before, except both the -ve and +ve values will be clamped to the maximum range item if required.

The Bar Graph

The bar graph is a rectangular analogue graph. This is intended to show a variety of data including speed and motor RPM.

The graph is constructed from the data parameters which can fully control the shape and appearance on screen.

The graph is intended to have tick marks, with values suitable to the selected data object.

Sub index items

The bar graph uses the following specific sub-items:

Sub index	Description	type
Sub 5	Graph flags. Control specific appearance settings.	U16
Sub 6	Data 1. Width of frame.	U16
Sub 7	Data 2. Height of frame.	U16
Sub 8	Data 3. Low alarm value below which the graph will display red	U16
Sub 9	Data 4. High alarm value above which the graph will display red	U16
Sub 10	Data 5. Not currently used	U16
Sub 11	Data 6. Maximum value displayed	U32

Sub 5 – Style flags


The style flags are contained within an u16 item. The flags help to define the operation of the item.

The following attributes can be configured:

- Direction of the graph fill.
- Tick marks on / off.
- How the value of the data object is shown on the graph. Standard filled bar graph, or position marker.

Represented as binary, msb at the left, the object is constructed as shown below. 'u' indicates that the bit is unused.

Configuring the Display

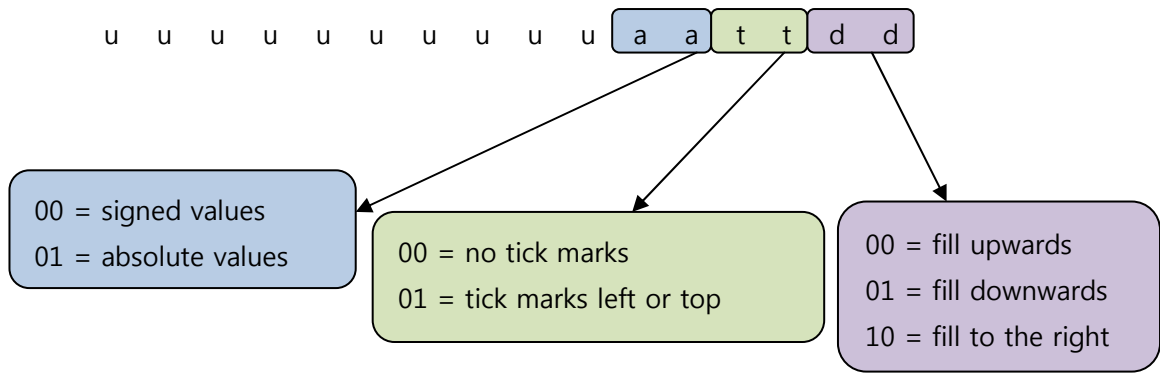

Sub 6 & 7 – (x,y) Size

These items defines the x and y size of the outer rectangle shape used to create the frame.

Sub 8 – Low Alarm

This item sets an alarm value, below which the colour of the bar graph fill will change to red.

Sub 9 – High Alarm

This item sets an alarm value, above which the colour of the bar graph fill will change to red.

Sub 11 – Maximum range

This defines the maximum range of the graph. The operation of this depends on the signed / absolute setting:

- If graph setting absolute:
 - If maximum range is less than the maximum for the referenced data object, then the maximum on screen range will be according to this item.
 - If maximum range is greater than the maximum for the referenced data object, then the maximum on screen range will be according to this referenced data object.
- If graph setting signed:
 - The maximum (min or max) value from the referenced DO is calculated.
 - Maximum range is then applied as before, except both the -ve and +ve values will be clamped to the maximum range item if required.

Data Object Text item

The text item will display the text representation of the contents of a data object. This is intended to display a typical 'name' 'value' 'units' text string on screen.

Sub Index items

The text item uses the following specific sub-items:


Sub index	Description	type
Sub 5	Style flags. Control specific appearance settings.	U16
Sub 6	Data 1. Text font.	U16
Sub 7	Data 2. N/A	U16
Sub 8	Data 3. N/A	U16
Sub 9	Data 4. N/A	U16
Sub 10	Data 5. N/A	U16
Sub 11	Data 6. N/A	U32

Sub 5 – Style flags

The style flags are contained within an u16 item. The flags help to define the operation of the item.

The component parts of a data object can be individually be enabled for display.

Represented as binary, msb at the left, the object is constructed as shown below. 'u' indicates that the bit is unused.

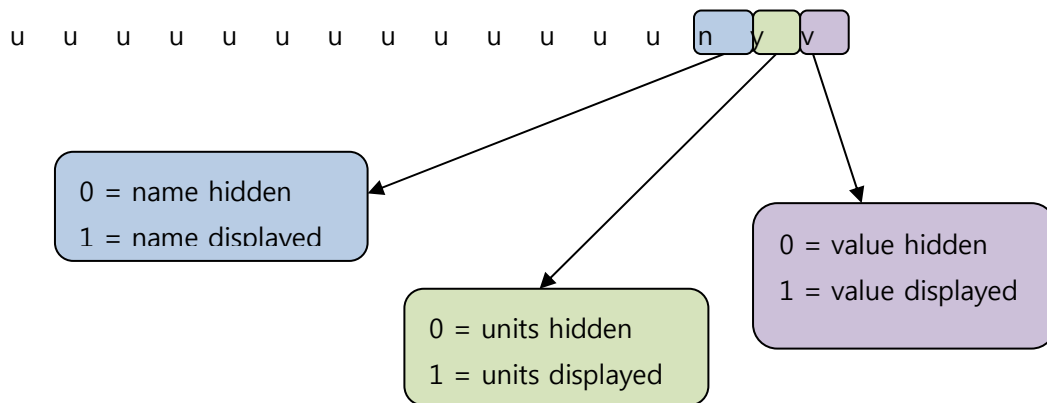

The text string is always in the order "[name] [value] [units]"

Sub 6 – Text font

The text font can be selected from the following options (not all text characters are available in all fonts):

Sub 6 value	Font
2	Arial 8pt
3	Arial 8pt bold
4	Arial 10pt
5	Arial 10pt bold
6	Arial 11pt
7	Arial 11pt bold
10	Arial 72pt
16	DS Digital 48pt
20	DS Digital 12pt
21	Comic Sans MS 10pt
22	Comic Sans MS 11pt

Bitmap item

This item will display bitmaps that are pre-compiled into the code. It is not possible to upload bitmaps to the display.

The bitmap can be controlled with an associated DO, so that up to 3 bitmaps can be selected in the screen item, with the bitmap displayed dependent on the value in the data object.


Sub Index items

The bitmap uses the following specific sub-items:

Sub index	Description	type
Sub 5	Style flags.	U16
Sub 6	Data 1. Bitmap reference 1.	U16
Sub 7	Data 2. Data value for bitmap 1.	U16
Sub 8	Data 3. Bitmap reference 2.	U16
Sub 9	Data 4. Data value for bitmap 2.	U16
Sub 10	Data 5. Bitmap reference 3	U16
Sub 11	Data 6. Data value for bitmap 3.	U32

Sub 5 – Style Flags

The style flags are contained within an u16 item. The flags define how many bitmaps are included, and when each bitmap should be displayed. Represented as binary, msb at the left, the object is constructed as shown below.

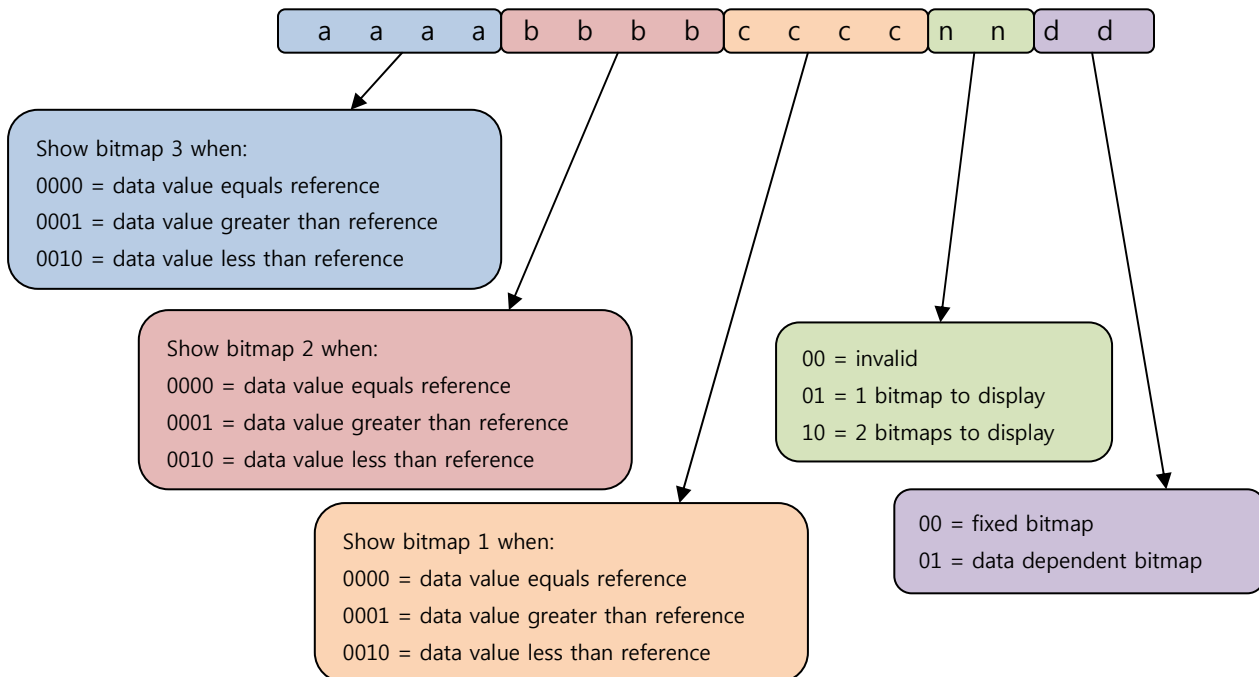


















Sub 6, 8, 10 – Bitmaps

These 3 sub index values define which bitmap should be shown for:

- Sub 6 = Bitmap 1.
- Sub 8 = Bitmap 2.
- Sub 10 = Bitmap 3.

The supported bitmaps are:

Bitmap number	Description	Image
0	None	No Bitmap
1	Sevcon Small Logo	
2	Down Arrow (chevron)	
3	Up Arrow (chevron)	
4	Park Brake	
5	Active Fault	
6	Letter F	
7	Letter R	
8	Letter N	
9	'D' highlighted in DNR set	
10	'N' highlighted in DNR set	
11	'R' highlighted in DNR set	
12	'F' highlighted in FNR set	

13	'N' highlighted in FNR set	
14	'R' highlighted in FNR set	
15	Warning level fault icon	
16	Inhibit level fault icon	
17	Severe level fault icon	



If you require different bitmaps for your application then contact your local Sevcon representative.

Sub 7, 9, and 11 – Reference value

When displaying multiple bitmaps, reference values are used in conjunction with the bitmap display logic. (see Sub 5 – style flags)

The reference values are:

- Sub 7 = reference value for bitmap 1.
- Sub 9 = reference value for bitmap 2.
- Sub 11 = reference value for bitmap 3.

Time and Date item

The screen item will display the text representation of the current time and date.


Sub items

The text item uses the following specific sub-items:

Sub index	Description	type
Sub 5	Style flags. Control specific appearance settings.	U16
Sub 6	Data 1. Text font.	U16
Sub 7	Data 2. N/A	U16
Sub 8	Data 3. N/A	16
Sub 9	Data 4. N/A	16
Sub 10	Data 5. N/A	16
Sub 11	Data 6. N/A	U32

Sub 5 – Style flags

The style flags are contained within an u16 item. The flags help to define which component parts of the data and time are displayed, and also the format to be applied. Represented as binary, msb at the left, the object is constructed as shown below. 'u' indicates that the bit is unused.

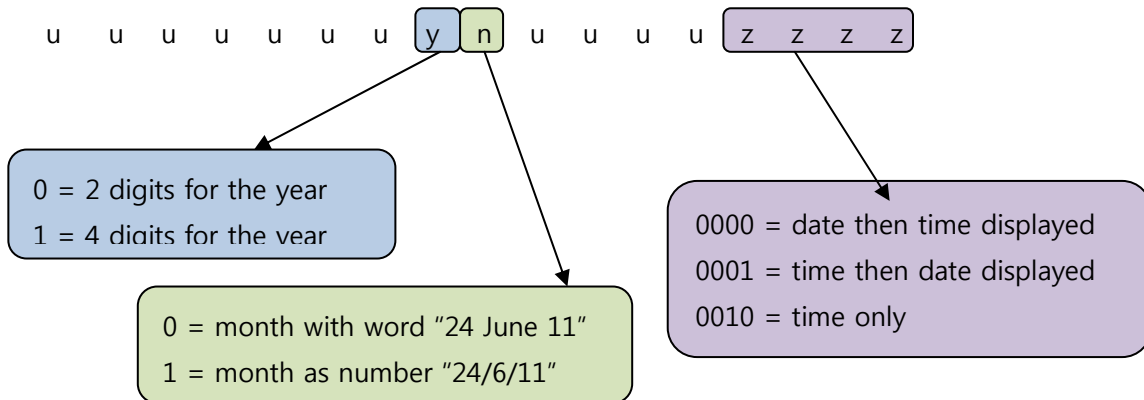

Sub 6 – Text font

The text font can be selected from the same fonts detailed in the data object text item.

Refer to "Data Object Text Item, sub 6".



Chapter 7: Local Display Settings

Display Parameters

The display has a number of user configurable settings which can be used to change the regional settings, time, date, units format, etc.

Clock Settings

The display has a built in clock which is used to time stamp incoming fault events, and can be displayed on the screen.

To affect the look of the date and time when displayed on the main screen, refer to the "Time and Date item" setup in Section 16.

In addition the following settings are available, which affect the date and time globally on the display:

- Clock Format; 12hr or 24hr format.
- Date Format; DDMMYY, MMDDYY, YYMMDD.
- Actual time and date.

These settings are available on the Configuration screen, under "Display-Time and Date"

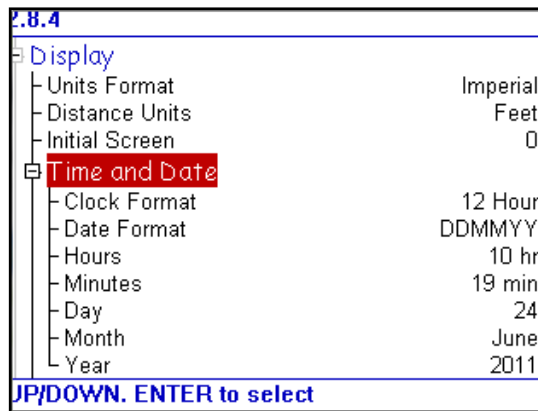


Figure 16 Time and Date Settings

Metric or Imperial Units

The display can automatically rescale some items on the screen to reflect metric or imperial units. This is selected using the "Units Format" item, located on the Configuration Screen under "Display"

This will change between the following units:

- Speed in km/h or mph.
- Temperature in °C or °F



In some cases, a change to the units format will not happen until the display is next powered on.

Distance Units

The distance units can be selected as a special case. These will affect the units and scaling that are used when showing distance items on the screen. The following units can be selected:

- Feet.
- Miles.
- Metres (m).
- Kilometres (km).

Time to Distance Parameters

The time to distance screen has configurable distance markers and configurable units. This enables alternative units to be displayed on this screen. For example, the main unit of distance could be km, but would be better as m on this screen.

The units can be selected (miles, m, feet, km) using the Display – Time to Distance – T to D Dist Units item of the Configuration screen.

The distance markers can be individually selected. The next time the Time to Distance screen is shown the new distances will be used for the markers.

These are located in the "Display – Time to Distance" section of the Configuration screen.

Fault log

The fault log can be cleared at any time by using the "Display – Fault Log – Reset Fault Log" parameter in the Configuration screen.



Chapter 8: Local CANbus Settings

CANbus Parameters

The display will automatically set up the required CANbus parameters to enable data gathering from the controllers. These can also be adjusted manually, which can correct connection issues and improve start-up speed.

Manual / Auto Baud rate

The display will automatically detect the baud rate used on the system by listening into the CAN bus traffic, and waiting to receive a valid message.

On some vehicle setups this can cause issues related to power on sequencing, and CAN off problems if there is a conflict, or more than 1 device attempting to auto discover baud rate.

To address this, the auto detect feature can be disabled with the "CANbus-Manual/Auto Baud" parameter in the Configuration screen.

Once the display is connected to the vehicle, and working correctly, this parameter can simply be set to "manual". On future power cycles the display will skip the baud rate detection process and use the CAN baud rate shown in the "System Baud Rate" parameter. This will prevent CAN issues related to incorrect baud rates on the CAN bus.



Configuring the display to manual baud rate setting will speed up the display power on process.

System Information

The first time the display is powered on, and detects some connected Sevcon nodes it will interrogate the nodes to determine the system configuration. This "system info" is then stored in the display so that on subsequent power cycles it can start up more quickly.

If the display is moved to a new vehicle or system, then the stored information will probably not match the actual vehicle setup.

Local CAN Bus Settings

The stored information can be cleared using the "CANbus-Clear System Info" parameter. Setting this item to 'yes' will cause the stored information to be erased. On the next power cycle the information will be re-acquired and stored.



The System configuration is determined from the VPDO and PDO settings that have been configured on the controllers on the vehicle. If these have not been configured correctly then the display may be able to locate all motors and I/O on the system. If after clearing the system info on the display, and cycling power some items are missing, check the PDO configuration of the system.




Chapter 9: Example Screen Layout

Example Layout

The Screen layout described in this section is intended to demonstrate the setup of each screen item that can be used on the main screen. This is the same layout as provided in the generic supplied display.

Example Screen Layout

The layout – bitmaps

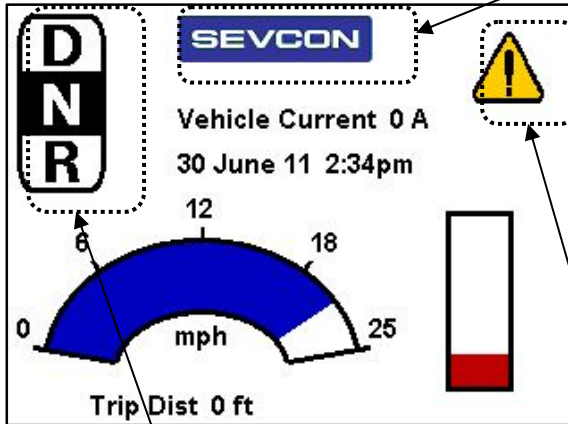

Bitmap Sevcon Logo.

Object 0x2906	Value
Sub 1	4
Sub 2	100
Sub 3	10
Sub 4	N/A
Sub 5	0x0004
Sub 6	1
Sub 7	N/A
Sub 8	N/A
Sub 9	N/A
Sub 10	N/A
Sub 11	N/A

Sub 1 (4) for a bitmap, located at (x,y) location of (sub2,sub3). Sub 5 (0x04) so 1 bitmap, not data dependent. Bitmap 1 is the Sevcon logo.

Bitmap showing forward, neutral, reverse drive state.

Object 0x2903	Value
Sub 1	4
Sub 2	10
Sub 3	10
Sub 4	0x0023
Sub 5	0x000d
Sub 6	9
Sub 7	1
Sub 8	10
Sub 9	0
Sub 10	11
Sub 11	2

Sub 1 (4) for a bitmap, located at (x,y) location of (sub2,sub3). Associated DO of 0x23, which is the composite vehicle drive mode item. Sub 5 (0x0d) so 3 bitmaps, data dependent, and all displayed when reference values equal the actual value. Bitmap 1 is shown when the value is 1, bitmap 2 when the value is 0, bitmap 3 when the value is 2.

Bitmap showing fault state

Object 0x2904	Value
Sub 1	4
Sub 2	265
Sub 3	20
Sub 4	0x0016
Sub 5	0x100d
Sub 6	15
Sub 7	1
Sub 8	16
Sub 9	2
Sub 10	17
Sub 11	2

Sub 1 (4) for a bitmap, located at (x,y) location of (sub2,sub3). Associated DO of 0x16, which is the highest fault level set on the vehicle. Sub 5 (0x1d) so 3 bitmaps, and data dependent. Bitmap 1 is shown when the value is 1, bitmap 2 when the value is 2, bitmap 3 when the value is greater than 2.

The layout – Arc Graph and Bar Graph

Arc graph showing vehicle speed

Object 0x2900	Value
Sub 1	1
Sub 2	10
Sub 3	105
Sub 4	2
Sub 5	0x0001
Sub 6	180
Sub 7	150
Sub 8	10
Sub 9	170
Sub 10	40
Sub 11	640


Sub 1 (1) for an arc graph, located at (x,y) location of (10,105). Associated DO of 2, which is the vehicle speed.

Sub 5 (0x01) graph is clockwise filled showing signed values if object is signed.

Arc comprised of ellipse which is overall size 180 pixels by 150 pixels. Thickness of the graph is 40 pixels.

Start angle is 10 degrees, end angle 170 degrees. Maximum value of 640, which considering the scale factor of x16 is 40kmh.

Display has been set to imperial units, so speed is then shown as mph, and scaled accordingly.

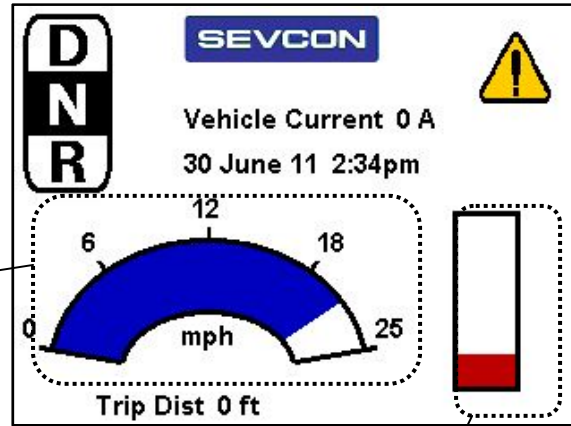

Bar graph showing battery state.

Object 0x2901	Value
Sub 1	2
Sub 2	250
Sub 3	120
Sub 4	6
Sub 5	0x0000
Sub 6	40
Sub 7	100
Sub 8	20
Sub 9	99
Sub 10	0
Sub 11	65535

Sub 1 (2) for a bar graph, located at (x,y) location of (250,120). Associated DO of 6, which is the BDI charge remaining.


Sub 5 (0x00) graph is filled upwards, with no tick marks.

Graph is a rectangle, overall size 40 pixels by 100 pixels.

Graph shows red, as min alarm limit is set to 20%, and BDI level is just below this.

Example Screen Layout

The layout – Text items

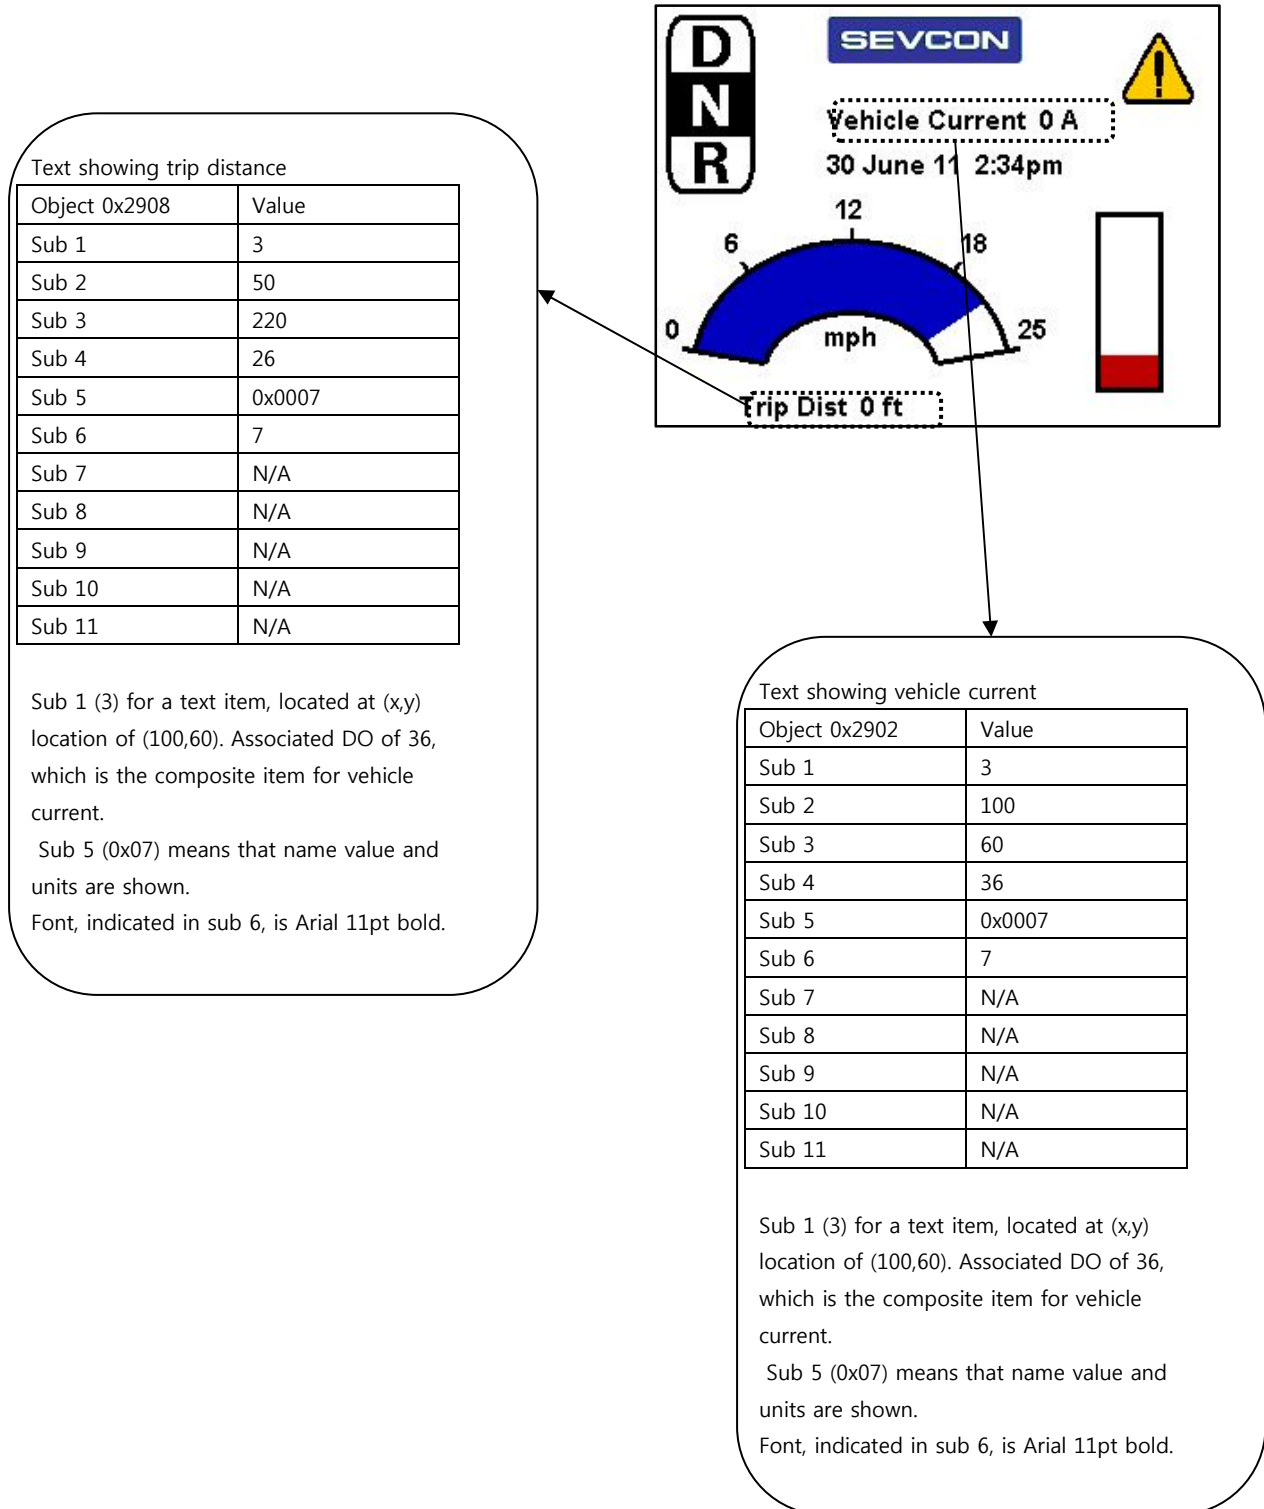

The layout – Date and Time

Date and Time item

Object 0x2907	Value
Sub 1	5
Sub 2	100
Sub 3	85
Sub 4	N/A
Sub 5	0x0000
Sub 6	7
Sub 7	N/A
Sub 8	N/A
Sub 9	N/A
Sub 10	N/A
Sub 11	N/A

Sub 1 (5) for a time and date item, located at (x,y) location of (100,85).
 Sub 5 (0x00) means that the item is displayed date then time, 2 digits for the year, and the month in words. The 12 hr format is set in the configuration screen.

